ASSEMBLY INSTRUCTIONS

WOW SHELVING




300KG Heavy Duty Rivet Racking

PACKAGE CONTENTS

(A) Uprights x4



(B) Long Beams x8

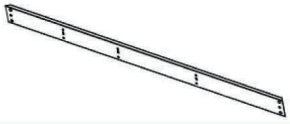


(C) Side Beams x8



(D) Plastic Feet x8



(E) Chipboards x4

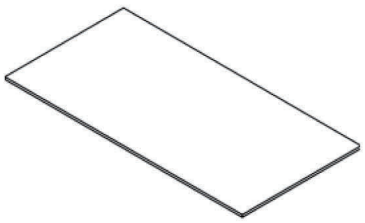

(F) Central Supports



180x60cm x12
150x60cm x8

- Please read these instructions thoroughly before starting assembly.
- If you require further information, contact the supplier.
- Inspect all packages for damage and check that all components have been supplied.
- Assembly should be undertaken by at least two people.
- **Caution**. Take care during assembly and day to day use, may have sharp edges.
- Wear appropriate clothing - protective gloves and footwear are recommended.
- Max 300KG per level with a total bay load of 1200 KG
- Make sure the floor is level.
- Take care when handling heavy items particularly when lifting or stretching.
- Not suitable for use in damp or wet environments.
- Ensure that the maximum load carrying capacities are not exceeded.
- Shelves must be loaded evenly. Load heavier items on the bottom.
- Never climb or stand on the shelves.


Tool required: Rubber mallet



ASSEMBLY INSTRUCTIONS


1. Take 2 uprights (A), make sure they are the right way up. The narrowest part of the keyhole must face down. Push the plastic protective feet (D) onto the bottom of the uprights. Insert a short side beam (C) into the keyholes at the lowest level required and tap into place with a rubber mallet. Repeat until you have created a ladder style frame.

(*Now is a good time to check that the space between the side beams suits the items you want to store on the shelves and adjust if required.)

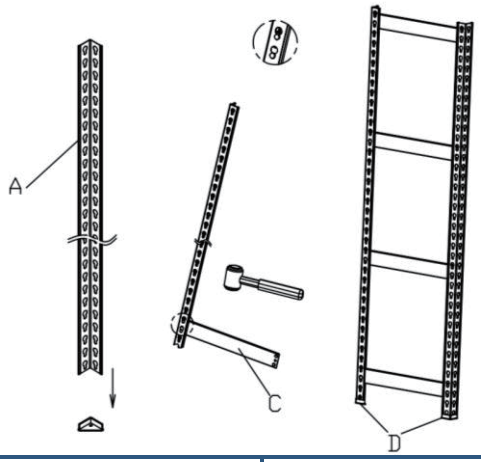


2. Create a second ladder frame. Use the first frame as template to get the correct spacing.


3. Connect the frames with two long beams (B) at the same height as the side beams. Tap into place with a rubber mallet.

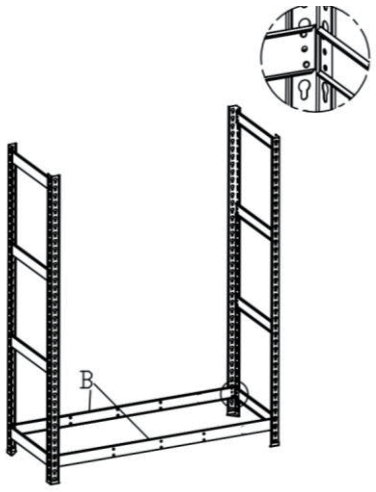

4. Insert 3 centre supports (F) into the metal studs of each long beam. Tap into place with a rubber mallet.

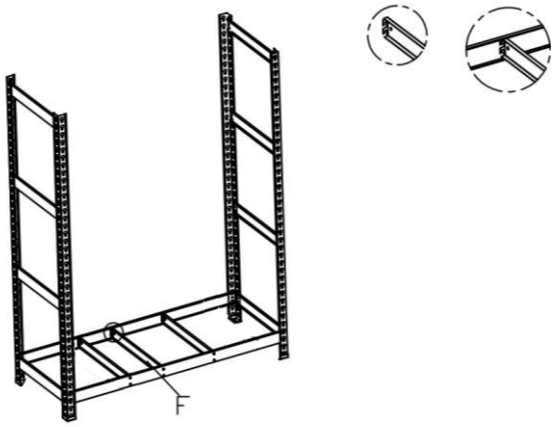

5. Repeat steps 3 and 4 to add the remaining levels. Insert the chipboard (E) into each level. The chipboard sits on top of the beams.

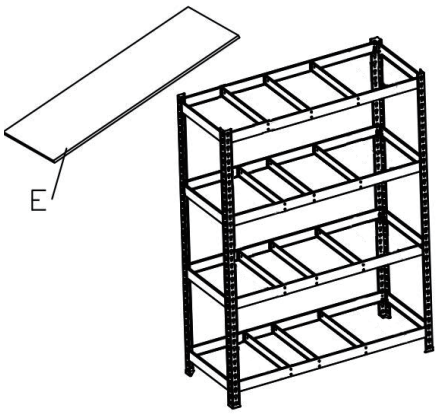

6. The unit is now complete.

